















OUTPUT VOLTAGE



A.C. BREAKER



OUTPUT CURRENT



+
-
OUTPUT VOLTAGE
TEST POINTS



MODEL A36-25-48V

INPUT: 100V 200V 240V ... VAC
16 A 20 A 25 AMPERE
AC/DC - SINGLE PHASE
OUTPUT: 48 VDC
..... 25 AMPERE DC

D.C. OUTPUT

1 FLOAT ADJUST	2 FLOAT EQUALIZE	3 EQUALIZE ADJUST
4 FLOAT	5 CURRENT LIMIT ADJUST	6 EQUALIZE

ALARM STATUS

7 HIGH VOLTAGE	8 BLOWN DC FUSE	9 LOW VOLTAGE
10 RECTIFIER FAILURE	11 LOW CURRENT	12 AC ON

A.M.
A.M. SYSTEMS, INC.
FOR TELEPHONE SYSTEM REPAIR AND SERVICE
MONDAY - FRIDAY 8:00 AM - 5:00 PM
TOLL FREE
(215) 641-1054
EMERGENCY SERVICE & REPAIRS
CALL
1-800-367-8729



CAUTION - HAZARDOUS VOLTAGE LEVELS. DO NOT REMOVE COVER.
DISCONNECT AC AND DC POWER BEFORE OPENING THIS COVER.
NOTE: SERVICE ONLY TO QUALIFIED SERVICE PERSONNEL.
THIS PRODUCT IS DESIGNED FOR INSTALLATION BY A LICENSED ELECTRICIAN.